


# Fermilab Constant Fraction Discriminator Readout Chip

**Si Xie**, Artur Apresyan, Ryan Heller, Christopher Madrid, Irene Dutta,  
Aram Hayrapetyan, Sergey Los, Cristian Pena, Tom Zimmerman

CPAD Meeting 2023


# Hardware-enabled CFD Readout for Timing Detectors

- Time-walk effect is well known & must be corrected for best performance
- Conventionally addressed with online or offline corrections via some type of LUT
- But under harsh radiation environments of future colliders, corrections may be time-dependent and messy!
- We propose a **hardware-enabled correction** via CFD built into the readout ASIC design

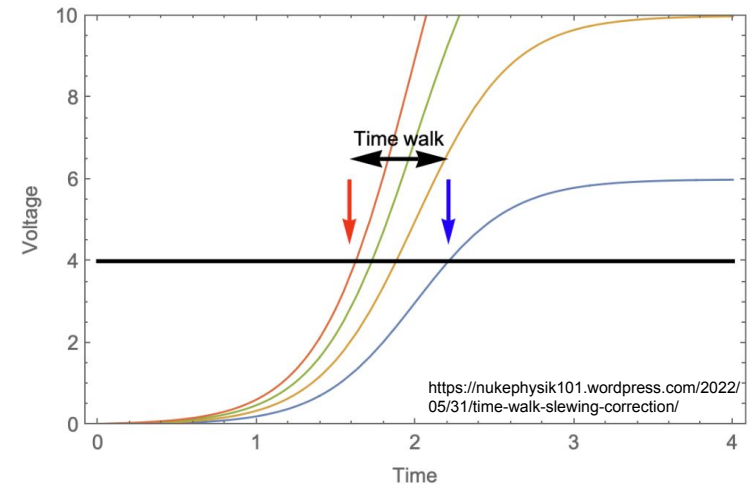


# Fermilab CFD Chip Design

- Primary application is (AC-)LGAD sensors for MIP signals
  - But can be used for many types of precision timing detectors
- Main features of the CFD are:
  - Integrator & Follower to create the “fraction” signal
  - Comparators for “arming” and timestamping

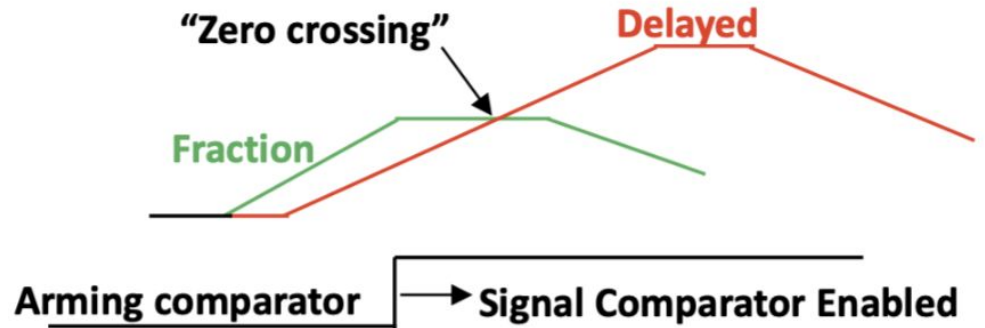



# Fermilab CFD Chip Design

- Primary application is (AC-)LGAD sensors for MIP signals
  - But can be used for many types of precision timing detectors
- Main features of the CFD are:
  - Integrator & Follower to create the “fraction” signal
  - Comparators for “arming” and timestamping

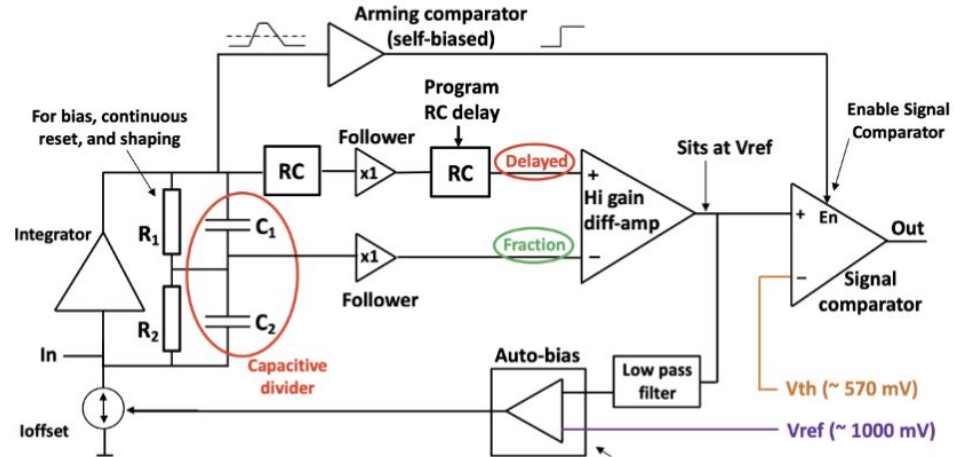


# FCDF Chip Prototype v0

- First prototype designed and fabricated in 2021 & tested in 2022

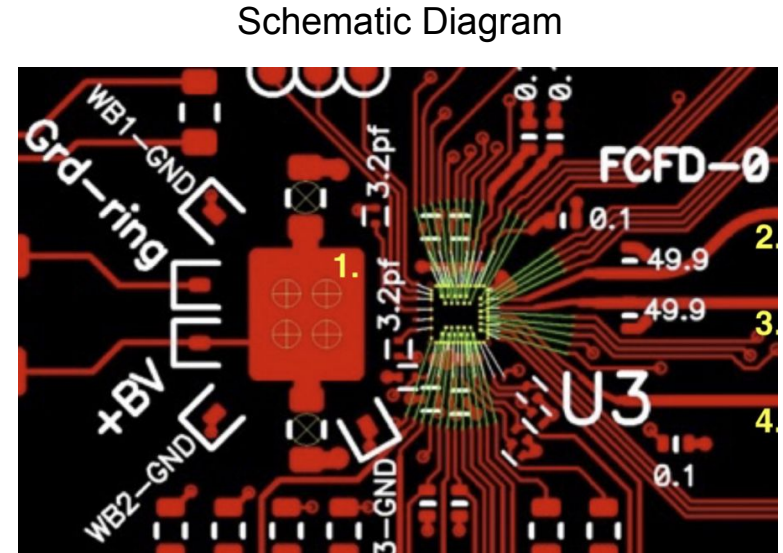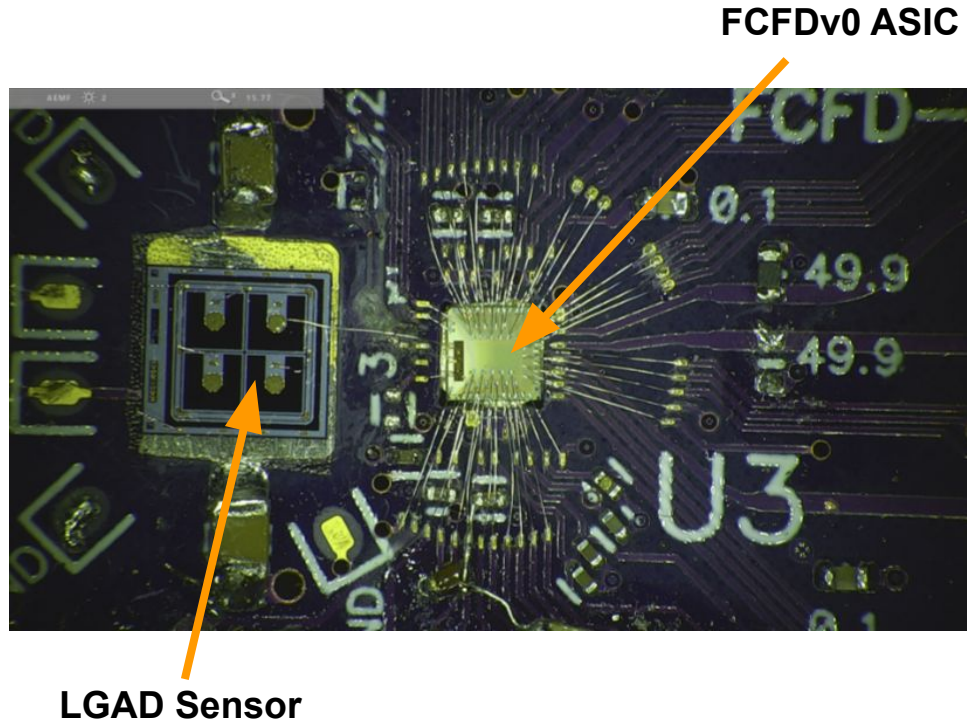

# FCDF Chip Prototype v0

- First prototype designed and fabricated in 2021 & tested in 2022

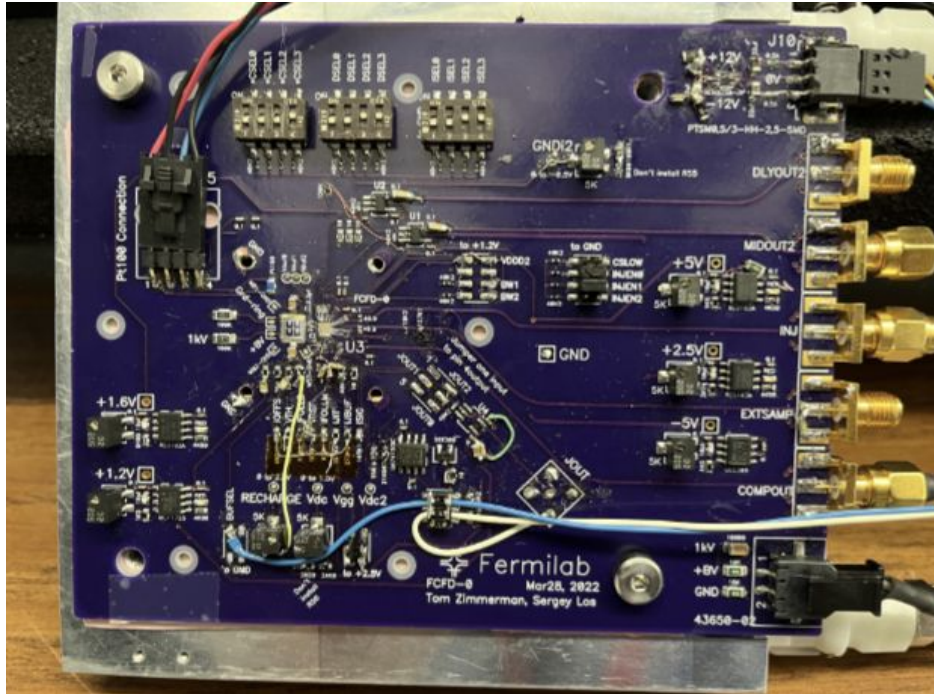

## Full Testboard

### Key testing features:

- Internal charge injection with 3-26 fC dyn range
- Switch to enable spy on analog signal

# Multi-Source Signal Testing Setup

- FCFD v0 performance evaluated using multiple types of signals:
  - Charge-injected signal
  - Picosecond Laser signal
  - Radioactive Source signal
  - Proton Beam signal

# Charge Injection

- Inject range of signal sizes from 3-26 fC using built-in mechanism
  - Time reference is clock signal used to trigger internal charge injection
  - Injected waveforms are based on LGAD signals from simulation (confirmed by past measurements)
- 
- Output waveforms look like this:
  - Spy waveform is small fractional copy of original signal
  - Discriminator waveform is CFD output and used for time-stamping



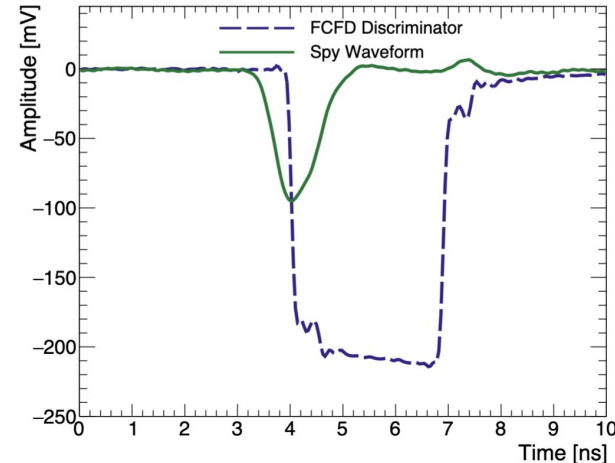


Figure 9: Candidate waveforms of the FCFDv0 discriminator output (blue) and the FCFDv0 input signal spy (green).

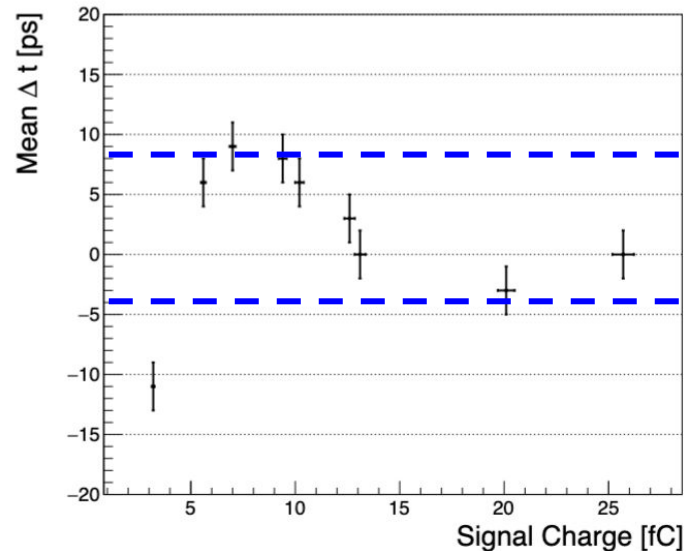

# Charge Injection



- Time resolution performance as expected
- For largest signal (before saturation) get  $\sim 8\text{ps}$  time resolution
- Time walk effect is reduced from hundreds of ps to a small  $\sim 10\text{ps}$  window

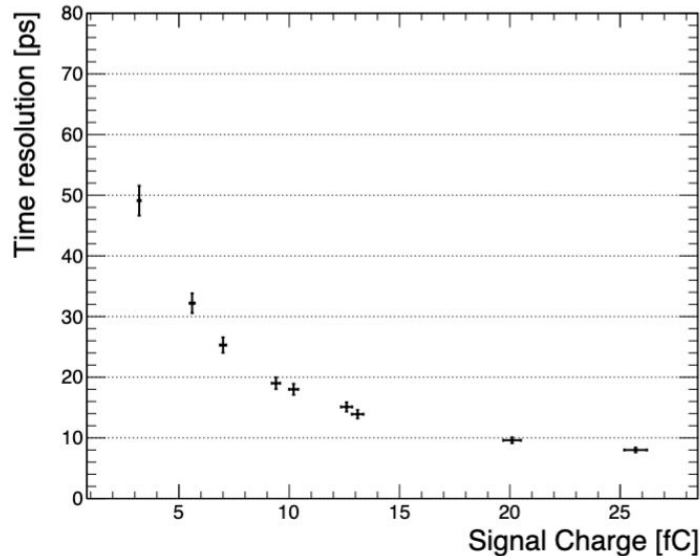

$\sim 10\text{ps}$   
window


# Picosecond Laser & Beta Source Setup

- Dark box with motorized stages, enabling laser injection and beta source
- Picosecond Laser trigger signal serves as time reference
- Collimator and MCP time reference detector ensures straight trajectories
- Get beta rates of about 2-3Hz at best alignment
- Temperature maintained at 20C by chiller and cooling block

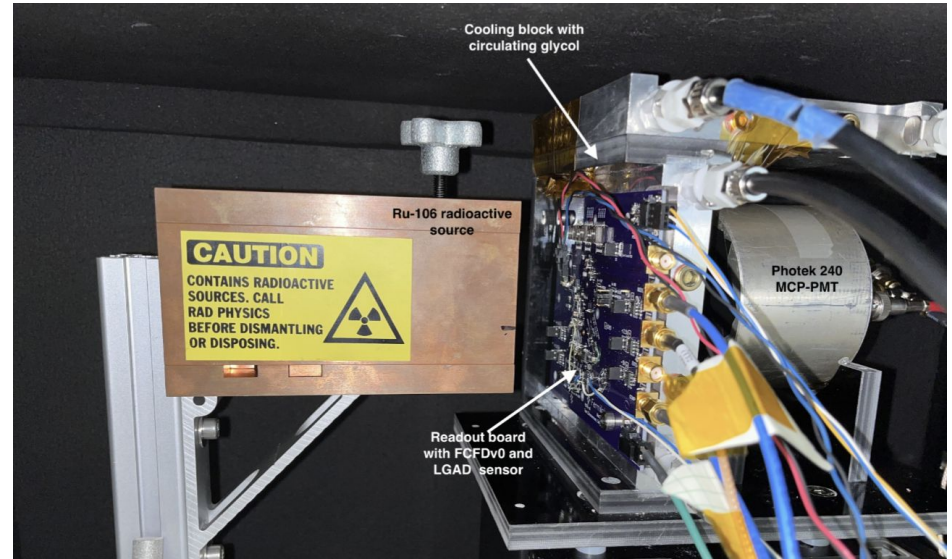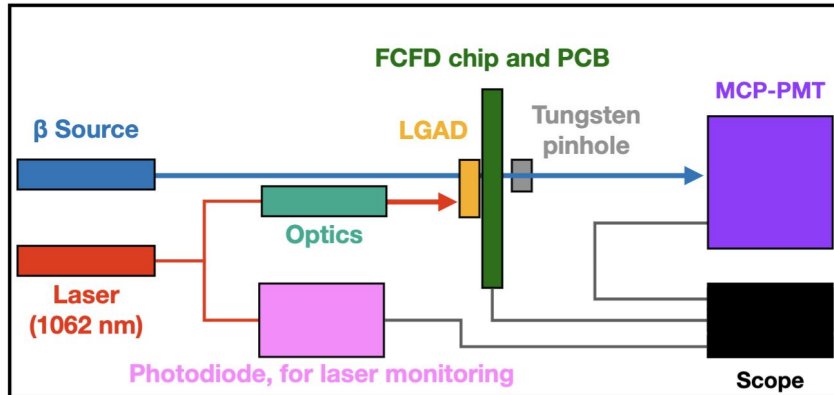


# Picosecond Laser Measurements

- Laser measurements confirm similar performance as charge injection

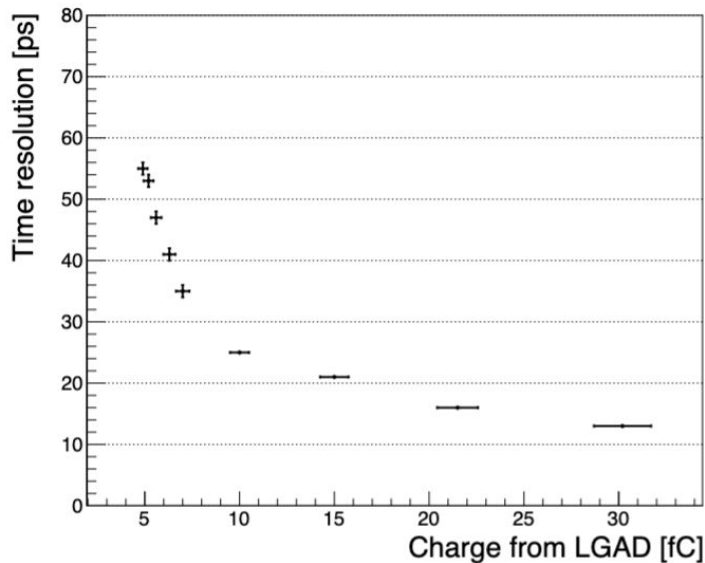


Signal here starts to saturate CFD v0  
Larger dynamic range addressed in next v1 chip

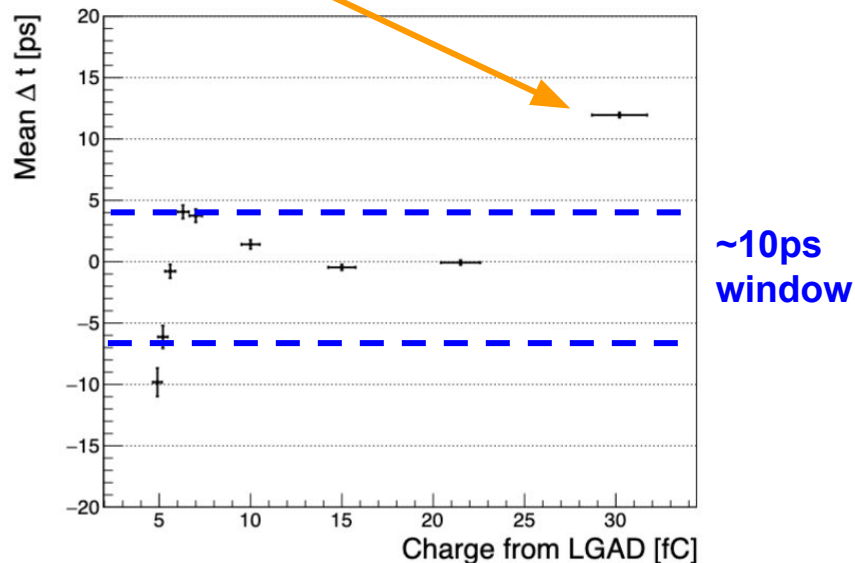



# Beta Source Measurements

- Similar performance is also confirmed with beta source
- The measured time resolution is consistent with a 8-10 ps contribution from the CFD chip, accounting for time jitter of LGAD sensor itself and imperfect collimator,

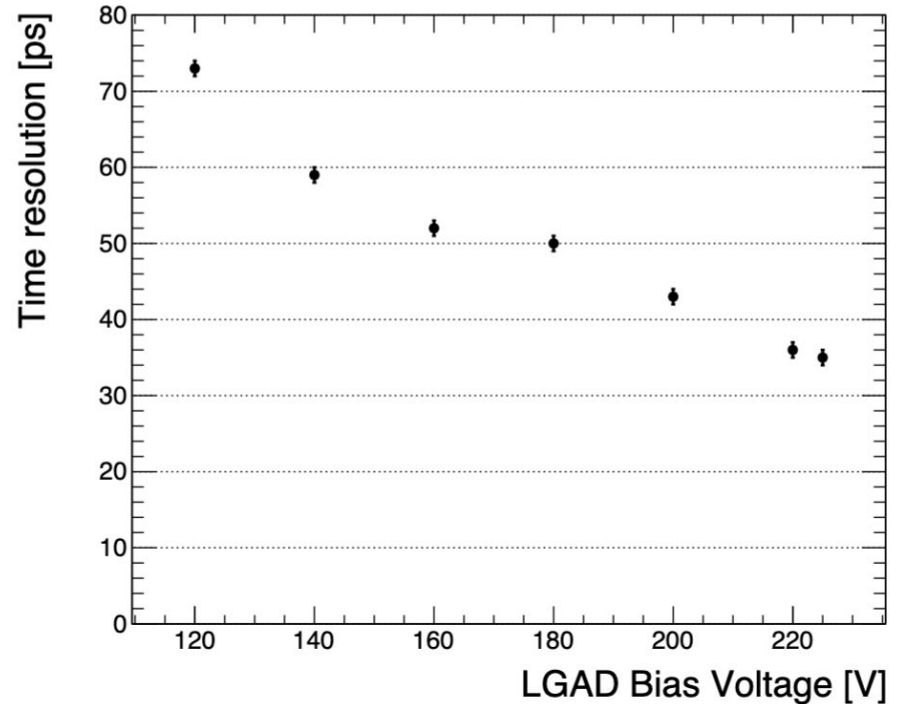



# Proton Beam Measurements

- Use Fermilab Testbeam Facility to test CFD chip with 120 GeV protons
- MCP-PMT used as time reference detector
- Temperature maintained at 20C
- Tracking telescope used to measure hit positions and efficiency

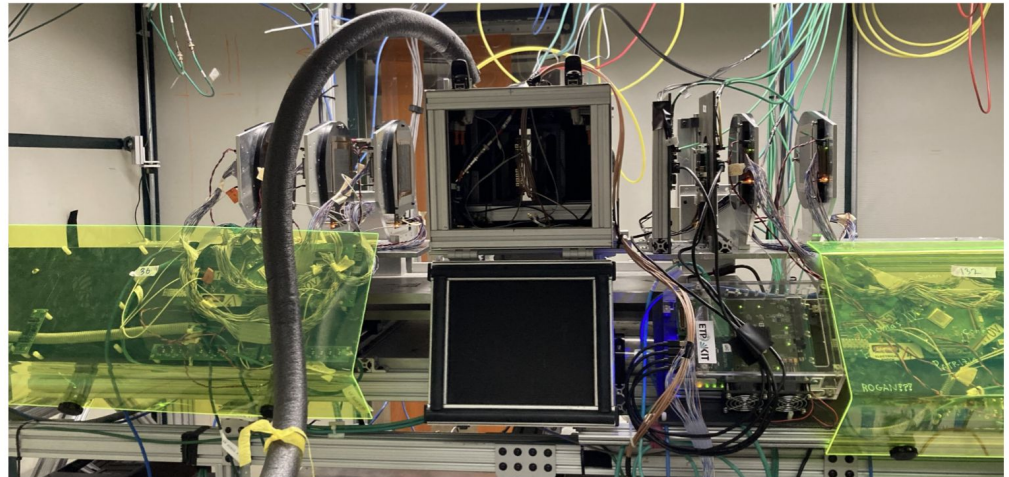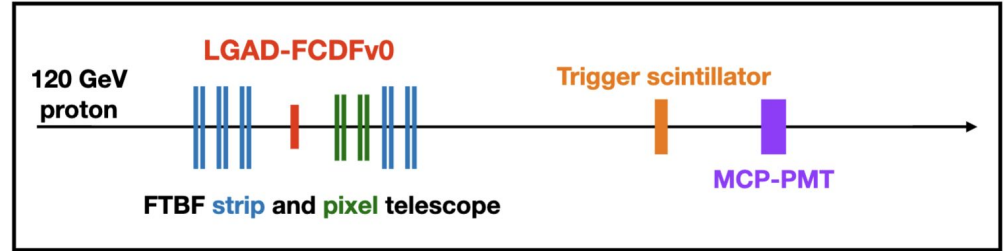

# Proton Beam Measurements

- 100% Efficiency is maintained over full LGAD pixel sensor area
- Time resolution performance consistent with Beta Source measurement

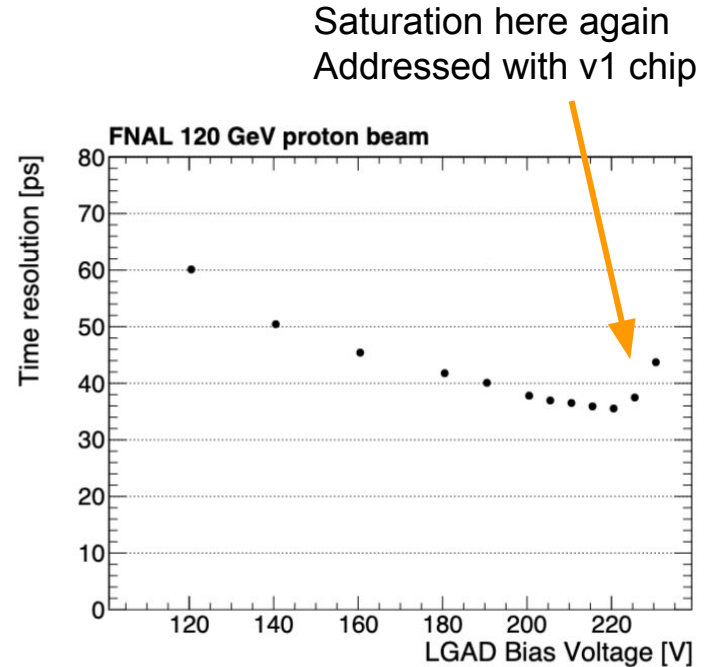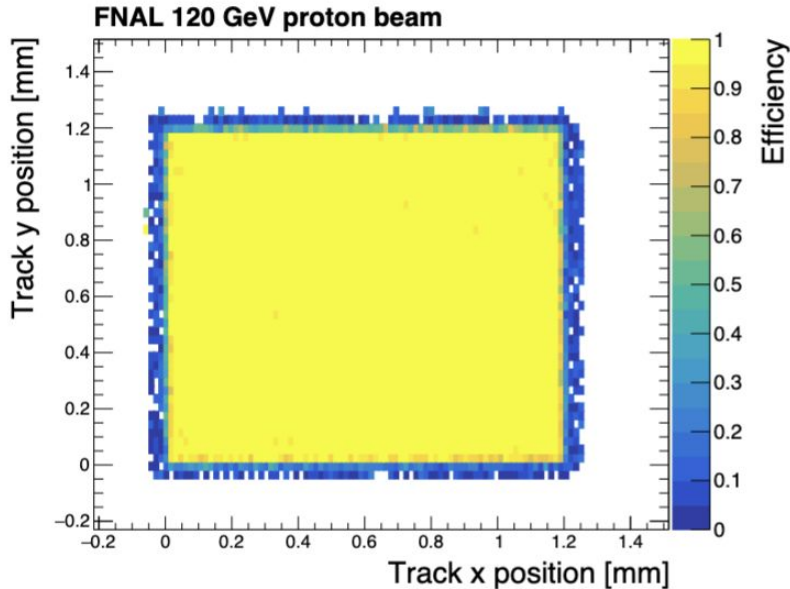

# Summary

- Presented Motivation, Design, and Results of Fermilab CFD v0 chip
- Measured performance consistent with design expectation and between many types of signal source
  
- Next Steps:
  - Version v1 has been submitted for fab
    - includes more channels (6)
    - Larger dynamic range to cover full range of MIP LGAD signals
  - Beyond v1, we plan to add digital components to readout to equip a fully functional AC-LGAD detector prototype

Backup